



XP



MODELS AVAILABLE

14' 12' 10' 8' 7'

Introducing the newest addition to Hunter's industrial fan line – the highly-efficient XP series, specifically designed for year-round HVAC cost savings and hassle-free installation. Engineered with a direct drive motor and industrial components, XP fans come with a standard 2' rigid mount and are powered by a readily available 110v input. The silent featherweight boasts variable speed control to provide fully adjustable airflow for maximum performance and efficiency, all at an unrivaled value.

Pre-assembled, patent-pending components, and plug-n-play wiring – we make it fast and easy. Just when you thought it couldn't get much better, the #1 most trusted name in ceiling fans continues to provide you with the maintenance-free reliability that is synonymous with every Hunter fan.

Easiest installation of any HVLS fan on the market.

- **NEW 7' DIAMETER**
- **RIGID MOUNT**
- **110V INPUT (ONLY)**
- **1:1 CONTROL (ONLY)**

INPUT POWER OPTION

110V 50/60HZ

POWER (HP)	5/8
MAX. AFFECTED AREA	4,900 - 1,225 SQFT
DECIBEL	<55dB
FAN DIAMETER	14 FT - 7 FT
FAN WEIGHT	121LB (55KG) - 100LB (45.5 KG)
BLADE FINISH	BLACK ANODIZED
MOTOR FINISH	BLACK POWDERCOAT

CERTIFICATIONS

ETL/INTERTEK-CERTIFIED TO ANSI/UL 507 AND CSA C22.2 NO. 113 IN NORTH AMERICA


WARRANTY

2-YEAR WARRANTY ON PARTS
LIFETIME WARRANTY ON AIRFOILS

FAN DIAMETER (A)	7 ft	8 ft	10 ft	12 ft	14 ft
-------------------------	------	------	-------	-------	-------

DESCRIPTION INPUT POWER	AC 1PH 100-120V 50/60 Hz
--------------------------------	--------------------------

STANDARD DOWNROD (B)	2 ft
	0.61 m

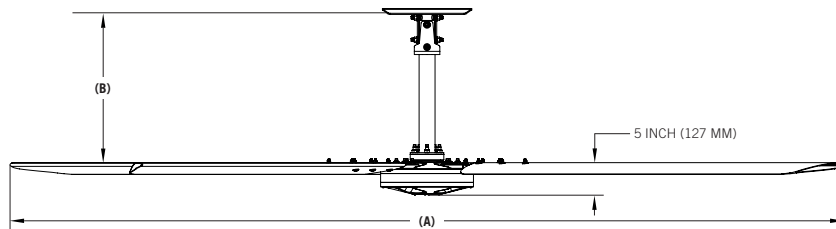

MOTOR POWER	5/8 HP
	0.466 kW

EFFECTIVE RANGE AREA	28 ft (Dia.)	32 ft (Dia.)	40 ft (Dia.)	48 ft (Dia.)	56 ft (Dia.)
	784 sqft	1,024 sqft	1,600 sqft	2,304 sqft	3,136 sqft
	8.53 m (Dia.)	9.75 m (Dia.)	12.20 m (Dia.)	14.63 m (Dia.)	17.07 m (Dia.)
	72.76 m ²	95.06 m ²	148.84 m ²	214.04 m ²	291.38 m ²

MAX. AFFECTED AREA	70 ft
	4,900 sqft
	21.33 m
	454.97 m ²

MAX RPM	200	156	139	108	108
----------------	-----	-----	-----	-----	-----

FAN HANG WEIGHT⁽¹⁾	100 lbs	104 lbs	108 lbs	117 lbs	121 lbs
	45.5 kg	47.3 kg	49.1 kg	53.2 kg	55 kg